



CATALOG OF REPLACEMENT PARTS


EV SERIES ELECTRIC RANGES



EV12
EV24S
EV36S
EV48S
EV60S
EV72S

Table of Contents


5	PLATES
7	OVEN CONTROLS (36 INCH)
9	CONTROLS AND ELECTRICAL COMPONENTS (12 INCH)
11	CONTROLS AND ELECTRICAL COMPONENTS (24 INCH)
13	CONTROLS AND ELECTRICAL COMPONENTS (36 INCH)
15	BODY (12 INCH)
17	BODY (24 INCH)
19	BODY (36 INCH)
21	DOOR ASSEMBLY
23	RANGE GRIDDLE
25	BACKSPLASH, SHELF, AND BULL NOSE (ALL SIZES)
27	OVEN ELEMENT

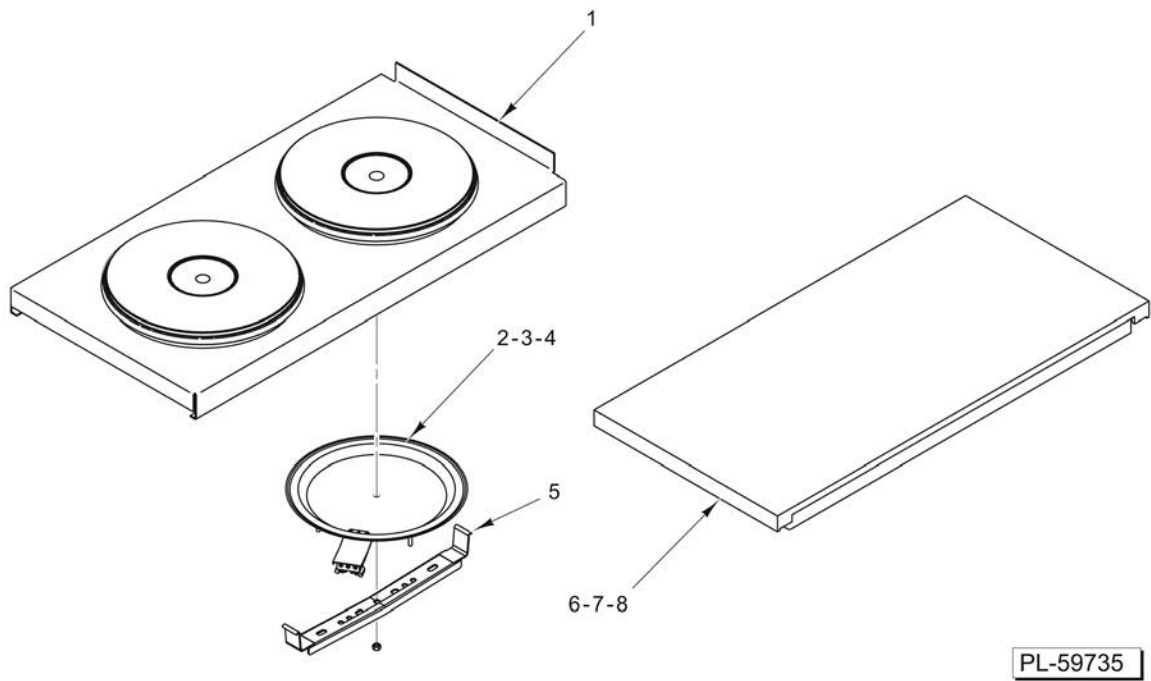

PLATES

PLATES

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-59735			
1	00-927501-0000A	Plate - Aeration (French Plate).....	AR
2	00-421240-00001	Plate - French E.G.O. (208 V.).....	AR
3	00-421240-00002	Plate - French E.G.O. (240 V.).....	AR
4	00-421240-00003	Plate - French E.G.O. (480 V.).....	AR
5	00-415048-00001	Clamp.....	AR
6	00-421320-00001	Top - Hot (208 V.).....	AR
7	00-421320-00002	Top - Hot (240 V.).....	AR
8	00-421320-00003	Top - Hot (480 V.).....	AR
	00-497042-000G2	Harness - French Plate (208/240 V.).....	AR

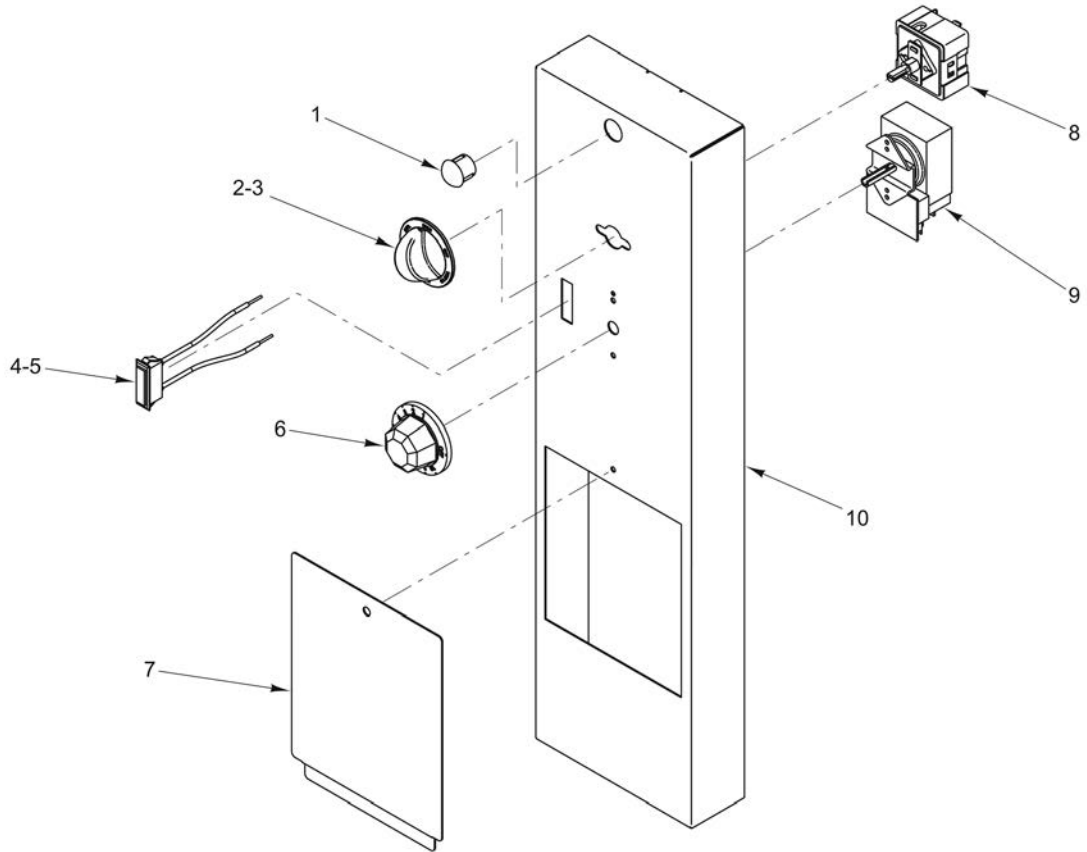


PL-59734

**OVEN CONTROLS
(36 INCH)**

**OVEN CONTROLS
(36 INCH)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-59734			
1	00-928068-00001	Plug.....	1
2	00-927603-00001	Knob - Infinite Switch (208 V., 240 V., & 380 V. Units Only).....	AR
3	00-412251-00003	Knob - Infinite Switch (480 V. Units Only).....	AR
4	00-428900-000G3	Light - Indicator.....	AR
5	00-417876-00001	Resistor (300 K., 1/4 W.) (480 V. Units Only) (Not Shown).....	1
6	00-418060-00002	Dial - Thermostat.....	AR
7	00-927507	Door - Access.....	AR
8	00-411503-00004	Switch - Infinite Load Control (208 V., 240 V., & 380 V. Units Only).....	AR
9	00-411506-00014	Thermostat (175-550 Deg. F).....	AR
10	00-927506	Control Panel - Vulcan.....	AR
	00-927533-000G1	Harness - Main (LH) (Not Shown).....	1
	00-927541-000G1	Harness - Power (Not Shown).....	1

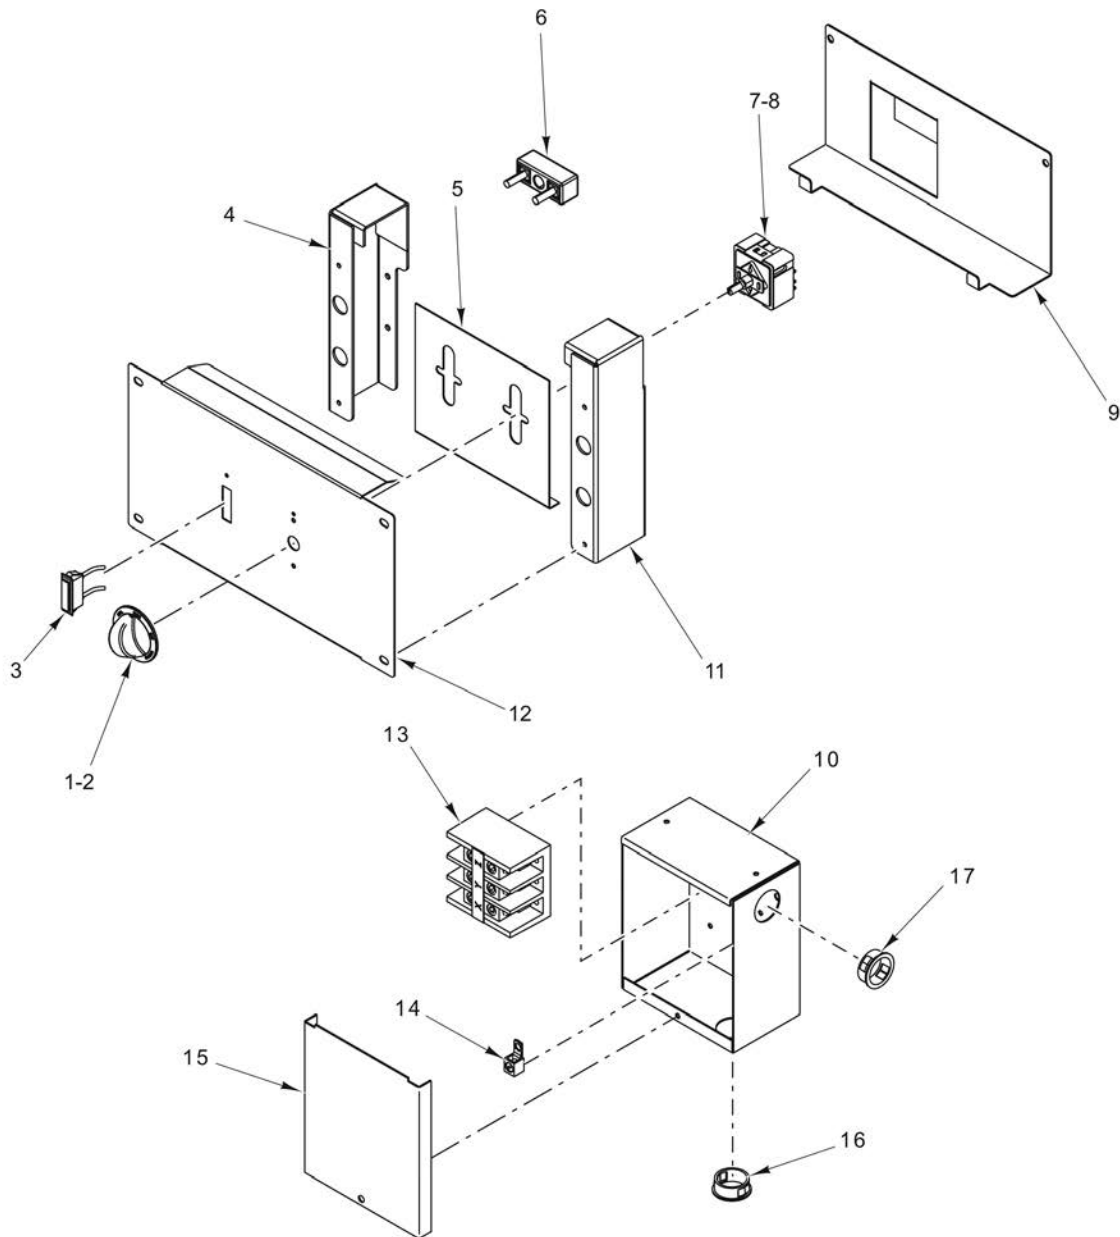


PL-59738

**CONTROLS AND ELECTRICAL COMPONENTS
(12 INCH)**

**CONTROLS AND ELECTRICAL COMPONENTS
(12 INCH)**

ILLUS. PL-59738	PART NO.	NAME OF PART	AMT.
1	00-927603-00001	Knob - Infinite Switch (208 V. & 240 V. Units Only).....	1
2	00-412251-00003	Knob - Infinite Switch (480 V. Units Only).....	1
3	00-499974-00001	Plug - Light (Hot Top & Griddle Units Only).....	1
4	00-921883	Bracket - Manifold Cover (LH).....	1
5	00-497496	Stiffener (12 In.).....	1
6	00-414881-00001	Block - Porcelain.....	1
7	00-411503-00004	Switch - Infinite Load Control (208 V. & 240 V. Units Only).....	1
8	00-355798-00001	Switch (4-Position Range) (480 V. Units Only).....	1
9	00-921887-00012	Bracket - Mount.....	1
10	00-499075	Box - Main Power.....	1
11	00-921882	Bracket - Manifold Cover (RH).....	1
12	00-921888-00012	Panel - Control.....	1
13	00-410472-00008	Block - Terminal (3-Pole).....	1
14	00-417856-00001	Lug - Grounding (With Set Screw).....	1
15	00-499076	Lid - Power Supply.....	1
16	FE-017-16	Bushing - Electrical Snap.....	1
17	FE-017-16	Bushing - Electrical Snap.....	1

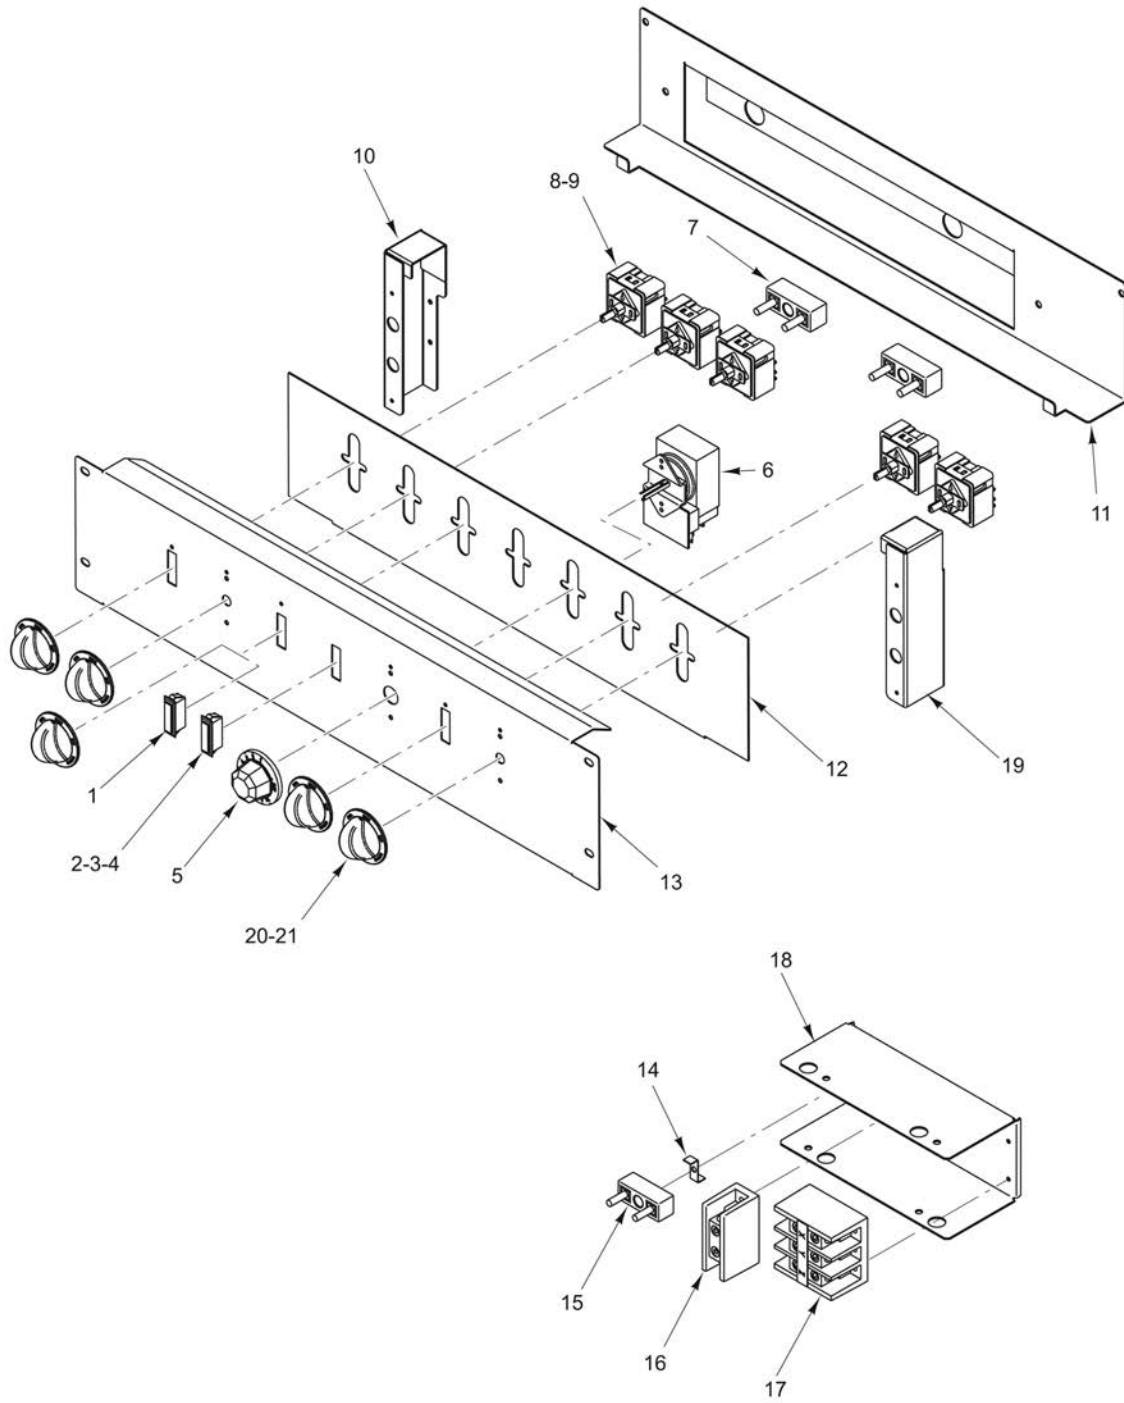


PL-59736

**CONTROLS AND ELECTRICAL COMPONENTS
(24 INCH)**

CONTROLS AND ELECTRICAL COMPONENTS (24 INCH)


ILLUS. PL-59736	PART NO.	NAME OF PART	AMT.
1	00-499974-00001	Plug - Light.....	1
2	00-428900-000G1	Plug - Light.....	AR
3	00-428900-000G3	Light - Indicator.....	AR
4	00-417876-00001	Resistor (300 K., 1/4 W.) (480 V. Units Only) (Not Shown).....	1
5	00-418060-00002	Dial - Thermostat.....	AR
6	00-411506-00014	Thermostat (175-550 Deg. F) (Oven).....	AR
7	00-414881-00001	Block - Porcelain.....	AR
8	00-411503-00004	Switch - Infinite Load Control (208 V. & 240 V. Units Only).....	AR
9	00-355798-00001	Switch (4-Position Range) (480 V. Units Only).....	AR
10	00-921883	Bracket - Manifold Cover (LH).....	1
11	00-921887-00024	Bracket - Terminal.....	1
12	00-927408	Panel - Stiffener (24 In.).....	1
13	00-921888-00024	Cover.....	1
14	00-497218-00001	Clip - Porcelain Block.....	1
15	00-414881-00001	Block - Porcelain.....	1
16	00-410472-00009	Block - Terminal (1-Pole).....	1
17	00-410472-00008	Block - Terminal (3-Pole).....	1
18	00-927514	Holder - Terminal Blocks.....	1
19	00-921882	Bracket - Manifold Cover (RH).....	1
20	00-927603-00001	Knob - Infinite Switch (208 V. & 240 V. Units Only).....	AR
21	00-412251-00003	Knob - Infinite Switch (480 V. Units Only).....	AR

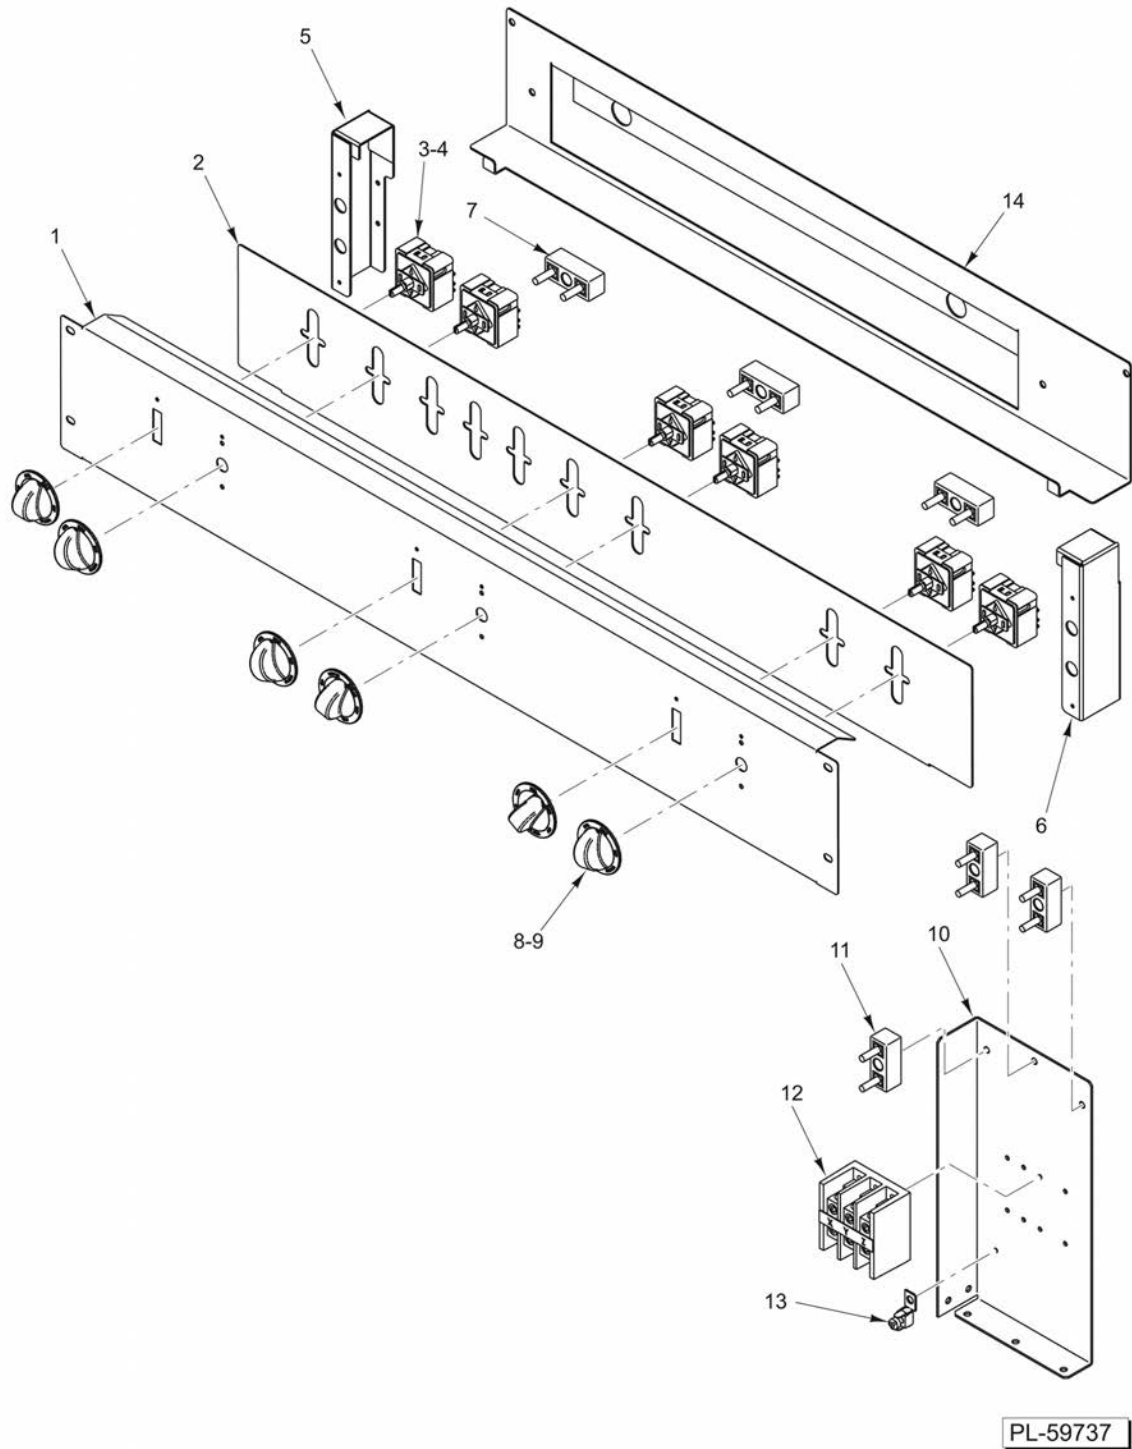

**CONTROLS AND ELECTRICAL COMPONENTS
(36 INCH)**

**CONTROLS AND ELECTRICAL COMPONENTS
(36 INCH)**

ILLUS. PL-59737	PART NO.	NAME OF PART	AMT.
1	00-921888-00036	Cover.....	1
2	00-927503	Panel - Stiffener (36 In.).....	1
3	00-411503-00004	Switch - Infinite Load Control (208 V. & 240 V. Units Only).....	AR
4	00-355798-00001	Switch (4-Position Range) (480 V. Units Only).....	AR
5	00-921883	Bracket - Manifold Cover (LH).....	1
6	00-921882	Bracket - Manifold Cover (RH).....	1
7	00-414881-00001	Block - Porcelain.....	AR
8	00-927603-00001	Knob - Infinite Switch (208 V. & 240 V. Units Only).....	AR
9	00-412251-00003	Knob - Infinite Switch (480 V. Units Only).....	AR
10	00-927509	Bracket - Terminal Block Mount.....	1
11	00-414881-00001	Block - Porcelain.....	3
12	00-410472-00008	Block - Terminal (3-Pole).....	1
13	00-417856-00001	Lug - Grounding (With Set Screw).....	1
14	00-921887-00036	Bracket - Terminal.....	1

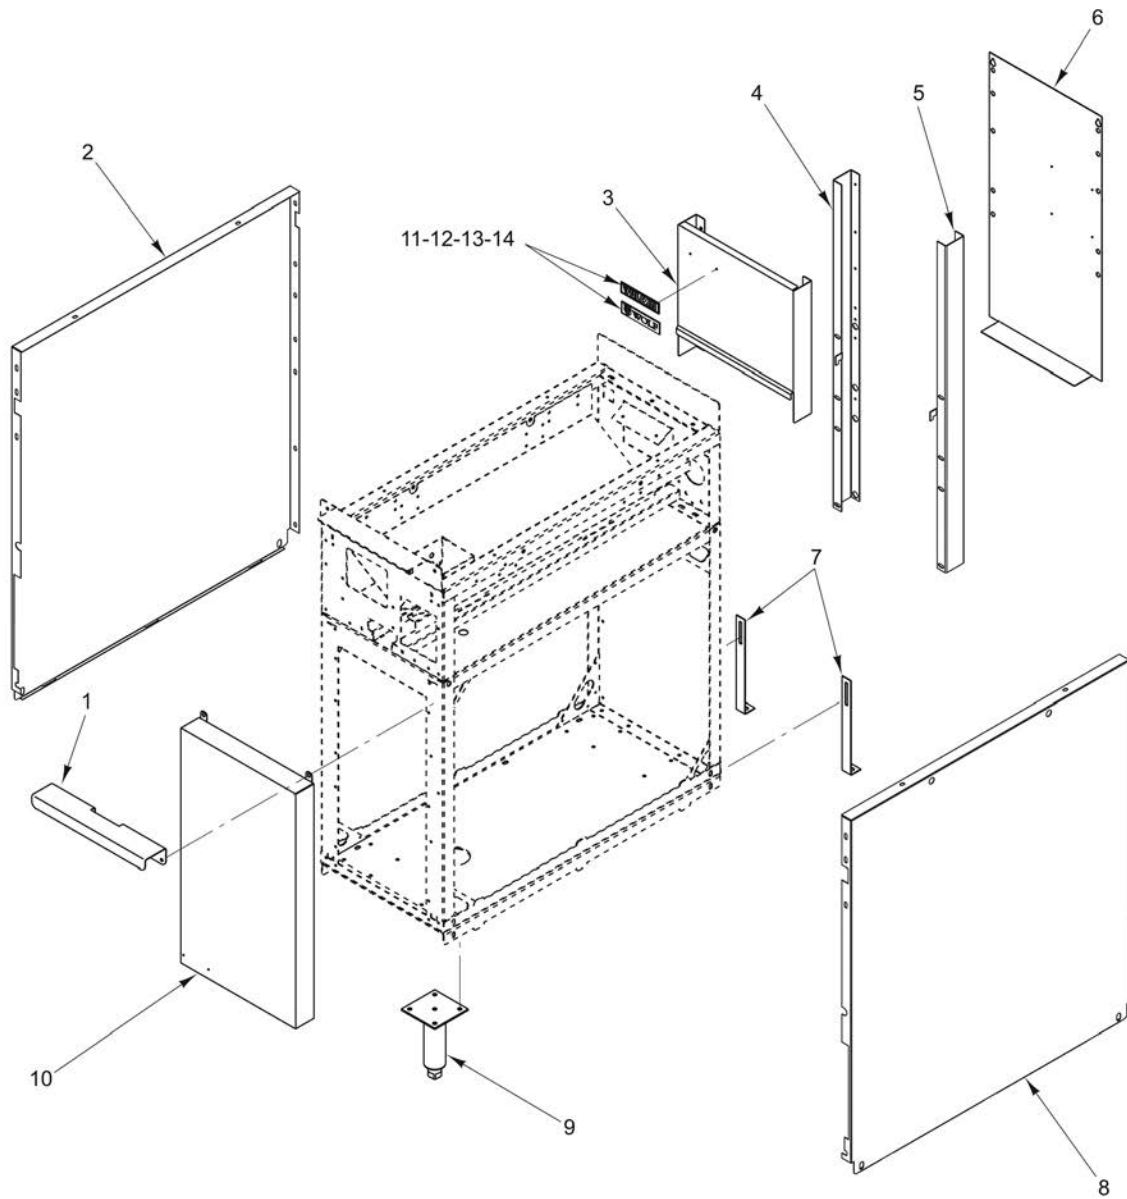


PL-59739

**BODY
(12 INCH)**

**BODY
(12 INCH)**

ILLUS. PL-59739	PART NO.	NAME OF PART	AMT.
1	00-927462	Handle - Crumb Tray.....	1
2	00-921808	Panel - Side (LH).....	1
3	00-921317	Backsplash (12 In.).....	1
4	00-922140	Channel (LH).....	1
5	00-922141	Channel (RH).....	1
6	00-921713	Panel - Back (12 In.).....	1
7	00-927459	Bracket - Anchor.....	2
8	00-921807	Panel - Side (RH).....	1
9	00-413112-00012	Leg (6 In.) (SST).....	4
10	00-927464	Cover - Front.....	1
11	00-957916-00003	Nameplate - Small (Vulcan).....	1
12	00-723204	Nameplate - Small (Wolf).....	1
13	NS-047-78	Pal Nut (Used with Wolf Nameplate).....	2
14	NS-047-79	Pal Nut 3/16 (Used with Vulcan Nameplate).....	2

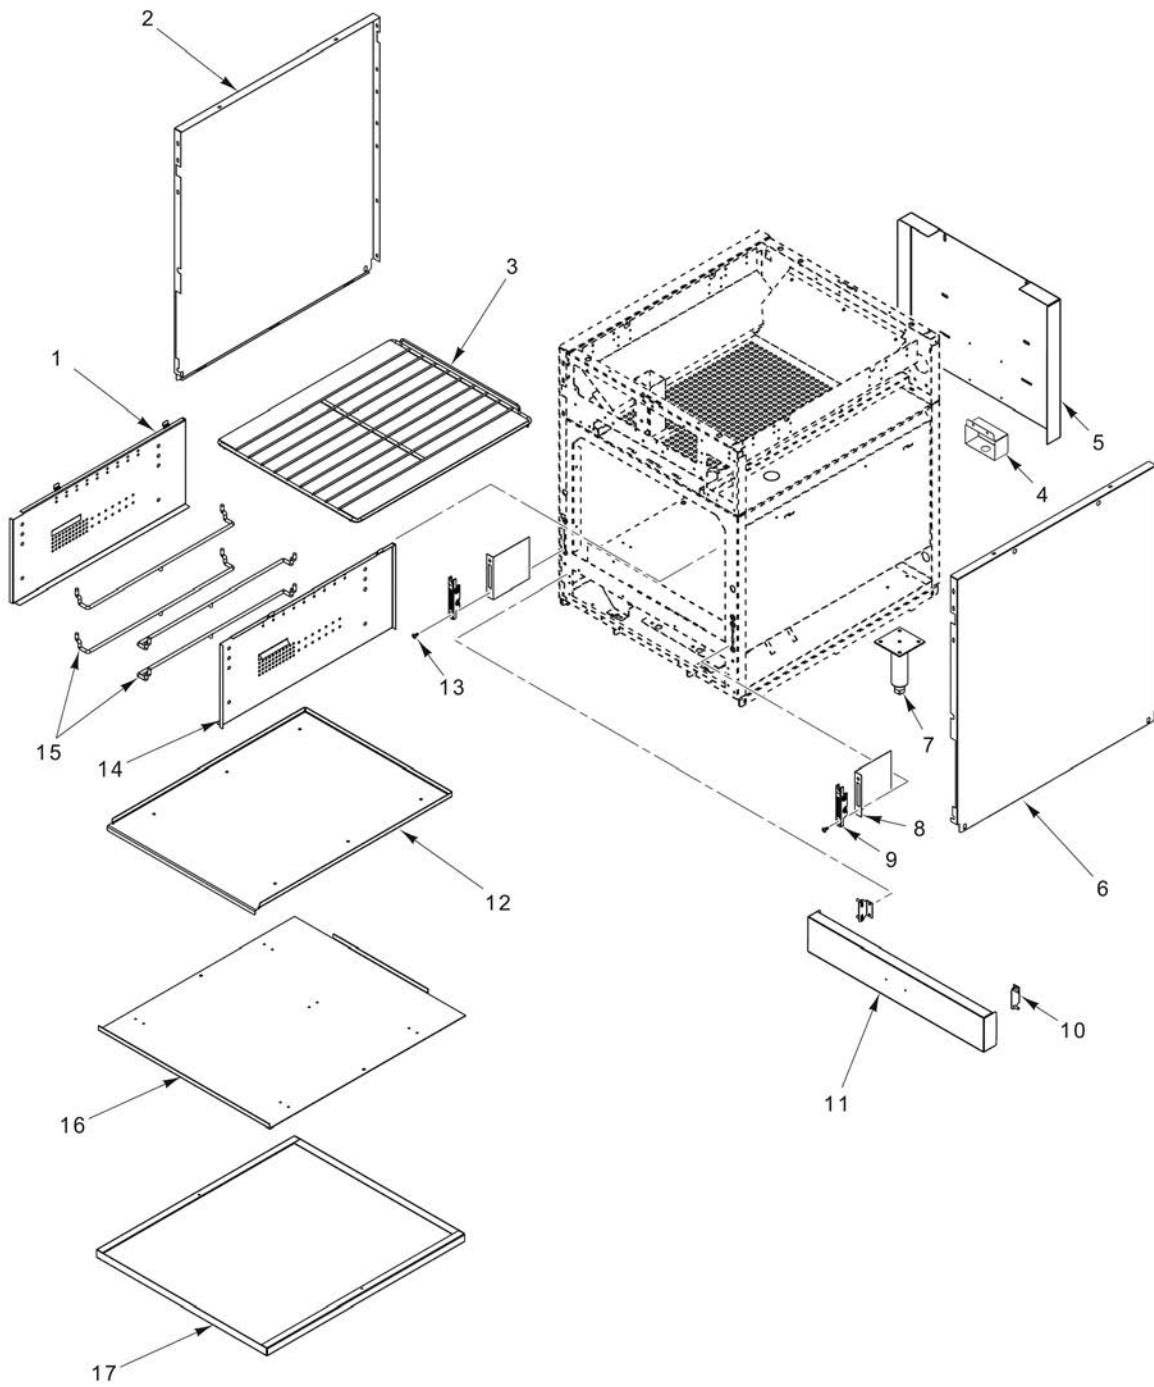


PL-59743

**BODY
(24 INCH)**

**BODY
(24 INCH)**

ILLUS. PL-59743	PART NO.	NAME OF PART	AMT.
1	00-921326	Side Liner - Left.....	1
2	00-921808	Panel - Side (LH).....	1
3	00-923508-0000A	Oven Rack (24 In.).....	2
4	00-921611	Cover - Element.....	2
5	00-921786	Flue - Rear.....	1
6	00-921807	Panel - Side (RH).....	1
7	00-413112-00012	Leg (6 In.) (SST).....	4
8	00-921095	Insulation - Door Hinge.....	2
9	00-497029-00001	Door Hinge Stop.....	2
10	00-428179-000G1	Bracket - Kick Panel Mounting.....	2
11	00-921785	Kick Panel Assy.....	1
12	00-923515	Cavity Bottom (24 In. Oven).....	1
13	00-723369	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	4
14	00-921325	Side Liner - Right.....	1
15	00-921064	Guide - Rack.....	4
16	00-927402	Plate - Element Mounting (24 In.).....	1
17	00-927403	Pan - Element (24 In.).....	1

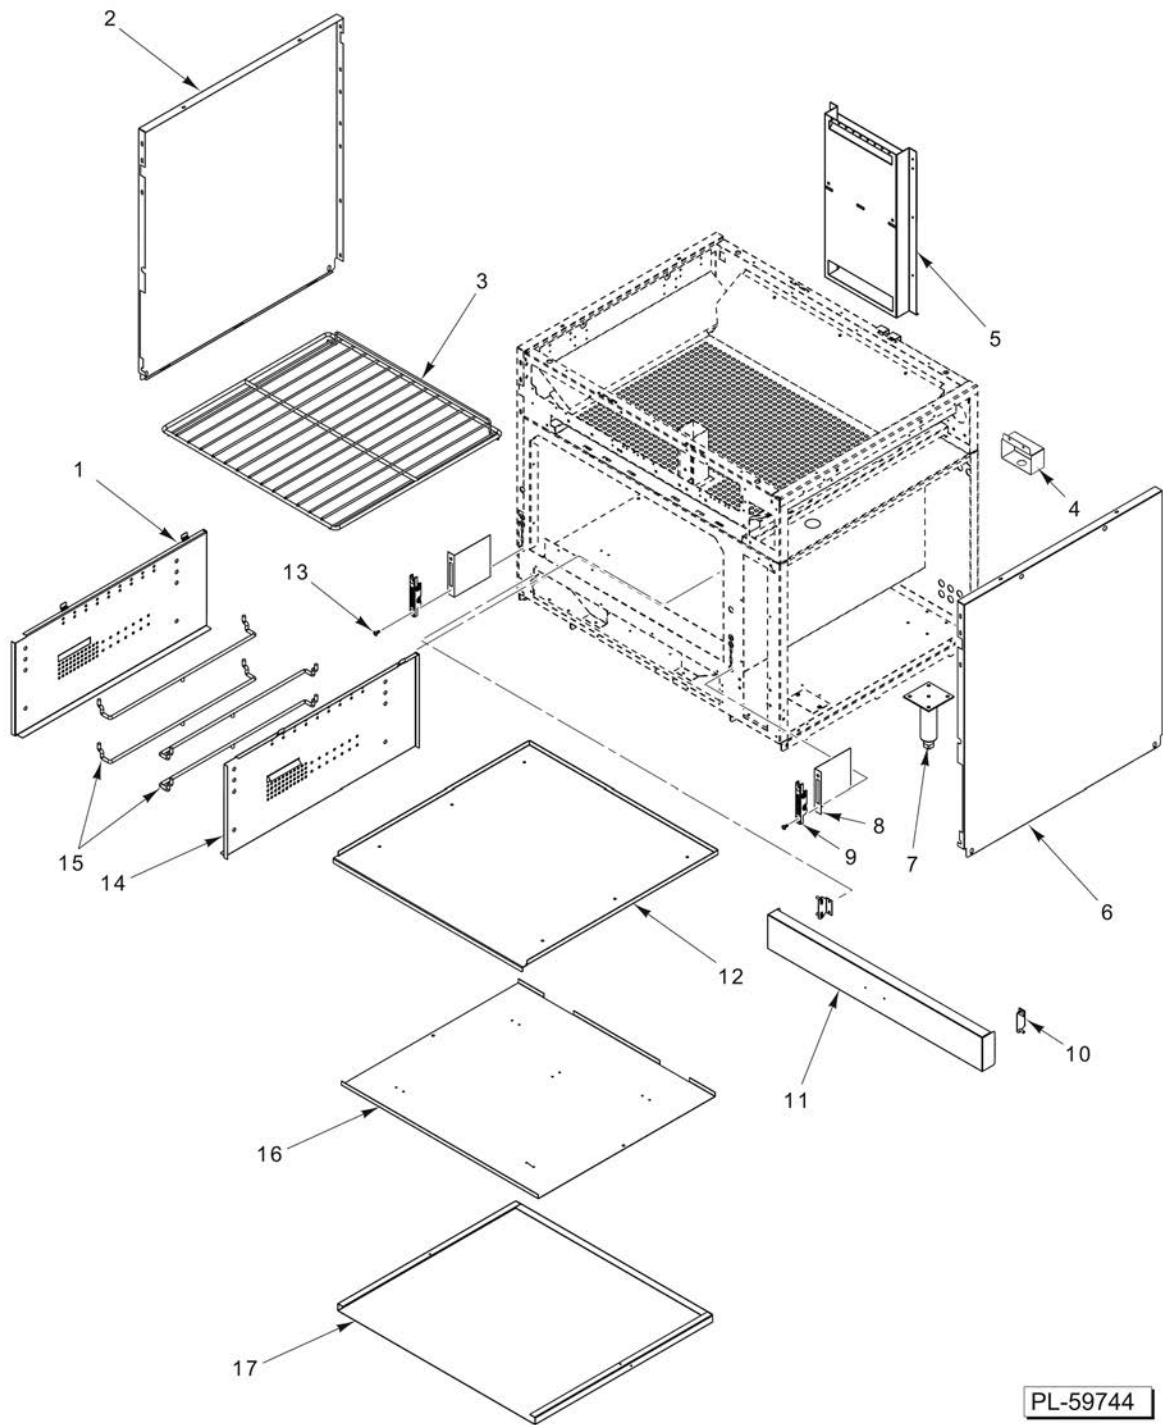


PL-59744

**BODY
(36 INCH)**

**BODY
(36 INCH)**

ILLUS. PL-59744	PART NO.	NAME OF PART	AMT.
1	00-921326	Side Liner - Left.....	1
2	00-921808	Panel - Side (LH).....	1
3	00-921010-0000A	Oven Rack (30 In.).....	2
4	00-921611	Cover - Element.....	2
5	00-921799	Channel - Back Flue.....	1
6	00-921807	Panel - Side (RH).....	1
7	00-413112-00012	Leg (6 In.) (SST).....	4
8	00-921095	Insulation - Door Hinge.....	2
9	00-497029-00001	Door Hinge Stop.....	2
10	00-428179-000G1	Bracket - Kick Panel Mounting.....	2
11	00-921721	Kick Panel Assy.....	1
12	00-921015	Cavity Bottom (30 In.).....	1
13	00-723369	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	4
14	00-921325	Side Liner - Right.....	1
15	00-921064	Guide - Rack.....	4
16	00-927511-00001	Plate - Element Mounting (30 In.).....	1
17	00-927510-00001	Pan - Element (30 In.).....	AR

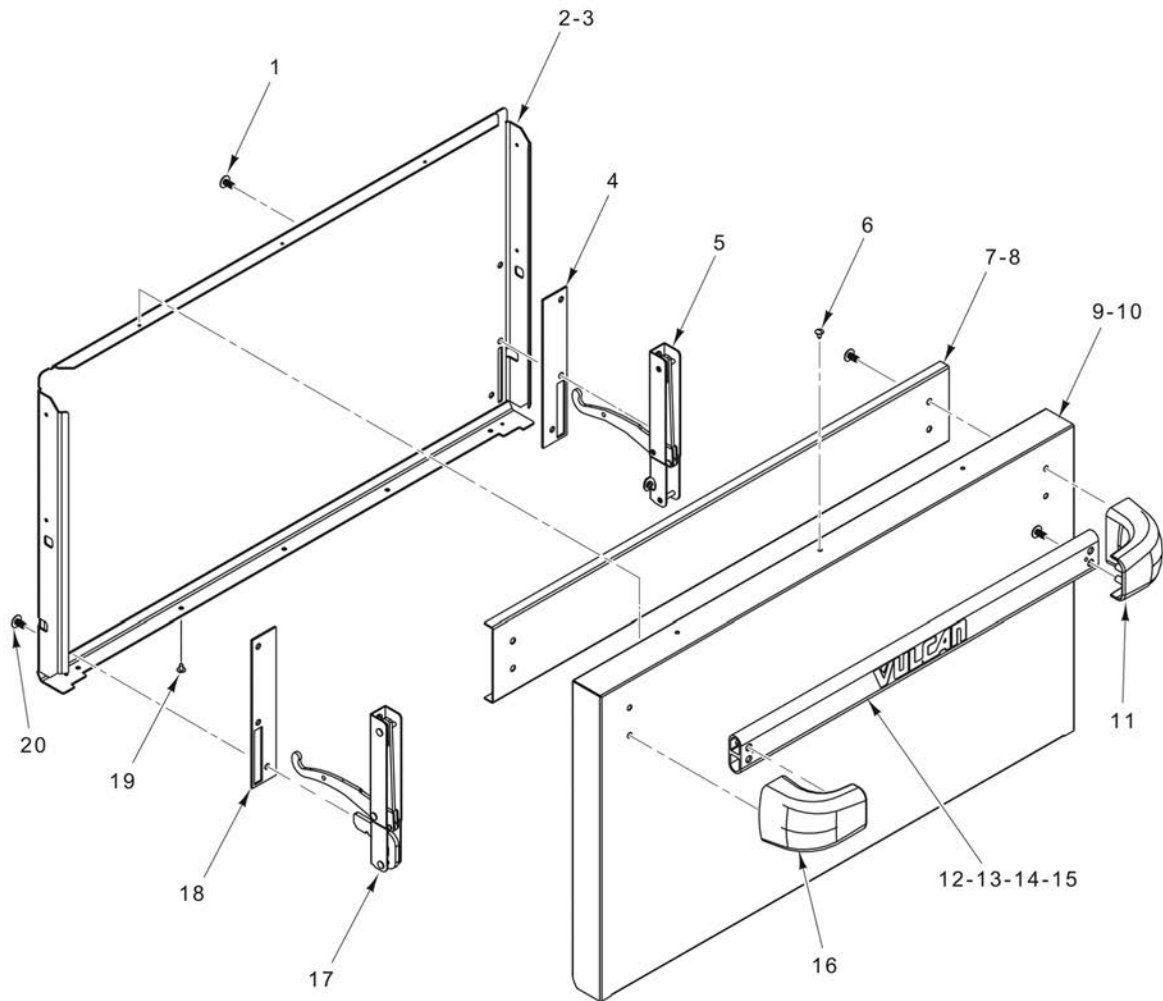


PL-59740

DOOR ASSEMBLY

DOOR ASSEMBLY

ILLUS.	PART NO.	NAME OF PART	AMT.
1	00-723369	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	3
2	00-922030	Liner - Door (24 In.).....	1
3	00-921022	Liner - Door (30 In.).....	1
4	00-921033	Insulator - Door Hinge.....	1
5	00-497027-00001	Hinge - Door Spring (RH).....	1
6	00-730240	Mach. Screw #8 x 1/2.....	3
7	00-922134	Reinforcement - Door (24 In.).....	1
8	00-922133	Reinforcement - Door (30 In.).....	1
9	00-921781	Panel - Door (24 In.).....	1
10	00-921749	Panel - Door (30 In.).....	1
11	00-922118	Bracket - Handle.....	1
12	00-922121	Handle - Door (24 In.) (Vulcan).....	1
13	00-922119	Handle - Door (24 In.) (Wolf).....	1
14	00-922122	Handle - Door (30 In.) (Vulcan).....	1
15	00-922120	Handle - Door (30 In.) (Wolf).....	1
16	00-922118	Bracket - Handle.....	1
17	00-497027-00002	Hinge - Door Spring (LH).....	1
18	00-921033	Insulator - Door Hinge.....	1
19	00-730240	Mach. Screw #8 x 1/2.....	3
20	00-723369	Mach. Screw 1/4-20 x 1/2 Phil. Truss Hd.....	3
	00-922131-0000A	Door Assy. (24 In.) (Incls. Items 1, 2, 4, 5, 6, 7, 9, 11, 12, & 16 thru 20).....	1
	00-922132-0000A	Door Assy. (30 In.) (Incls. Items 1, 3, 4, 5, 6, 8, 10, 11, 14, & 16 thru 20).....	AR

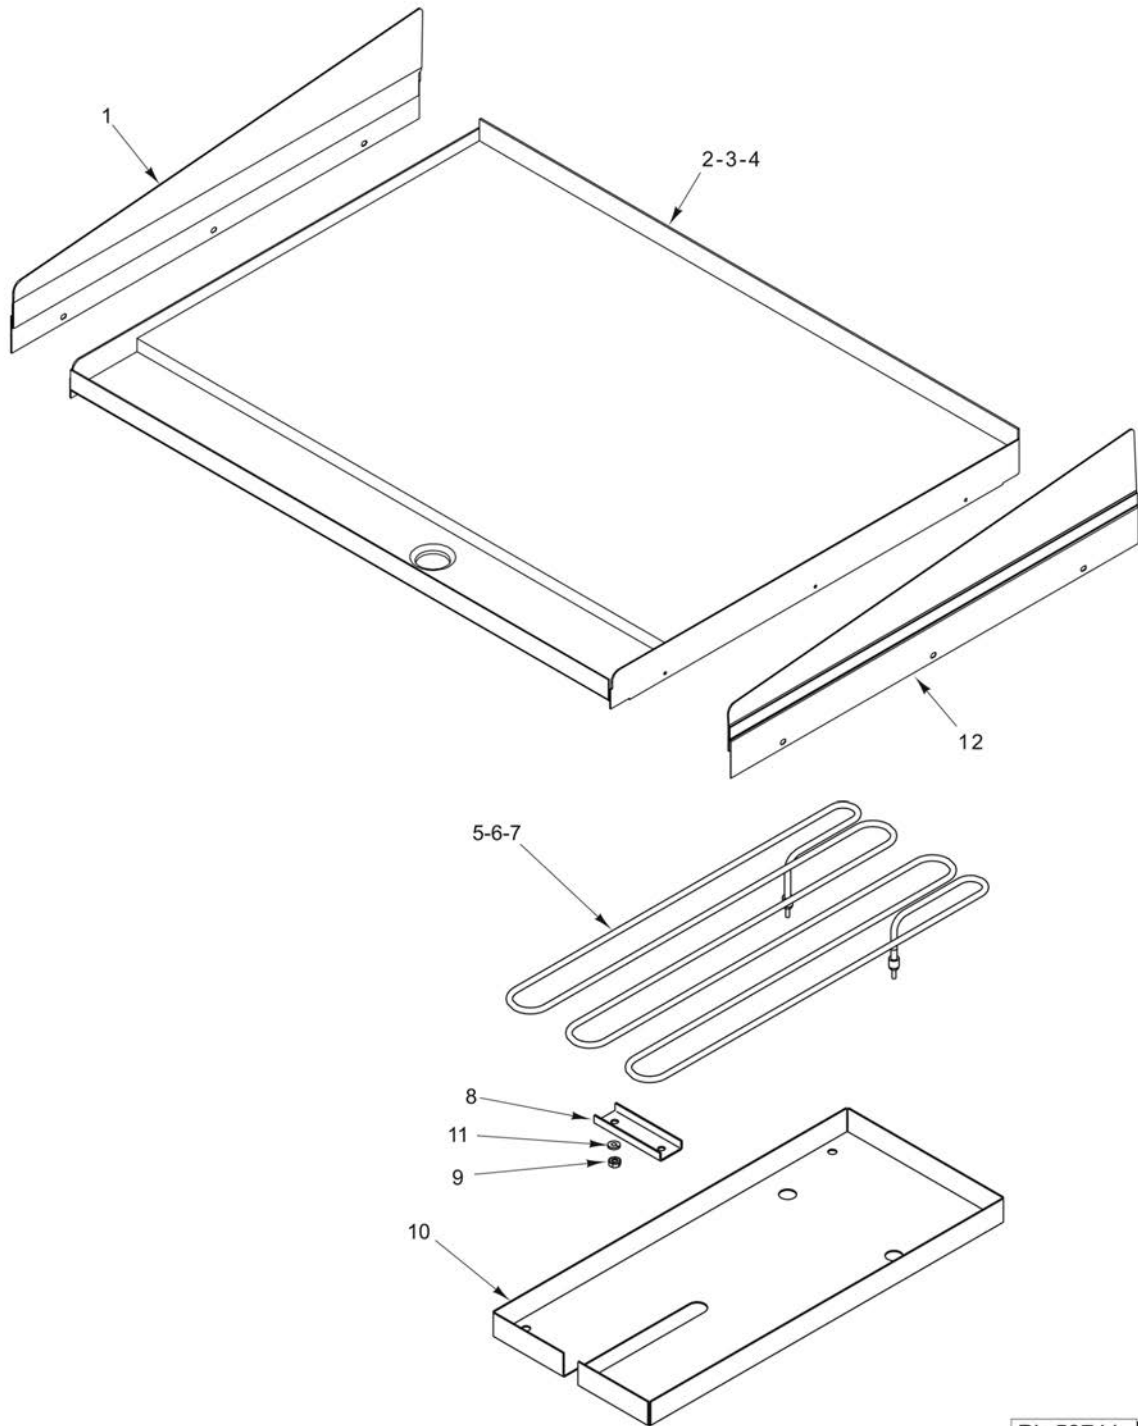


PL-59741

RANGE GRIDDLE

RANGE GRIDDLE


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-59741			
1	00-926527-0000A	Splash Assy. - Outer (LH).....	1
2		Griddle Plate Assy. (12 In.).....	1
3	00-924511-0000A	Griddle Plate Assy. (24 In.).....	1
4	00-926500-0000A	Griddle Plate Assy. (36 In.).....	1
5	00-407774-00001	Element - Griddle (208 V.).....	AR
6	00-407774-00002	Element - Griddle (240 V.).....	AR
7	00-407774-00003	Element - Griddle (480 V.).....	AR
8	00-927415	Brace - Griddle Element.....	AR
9	NS-046-52	Nut Assy. 1/4-20 Hex.....	AR
10	00-421145	Cover - Griddle Element.....	AR
11		Lockwasher.....	AR
12	00-926513-0000A	Splash Assy. - Outer (RH).....	1

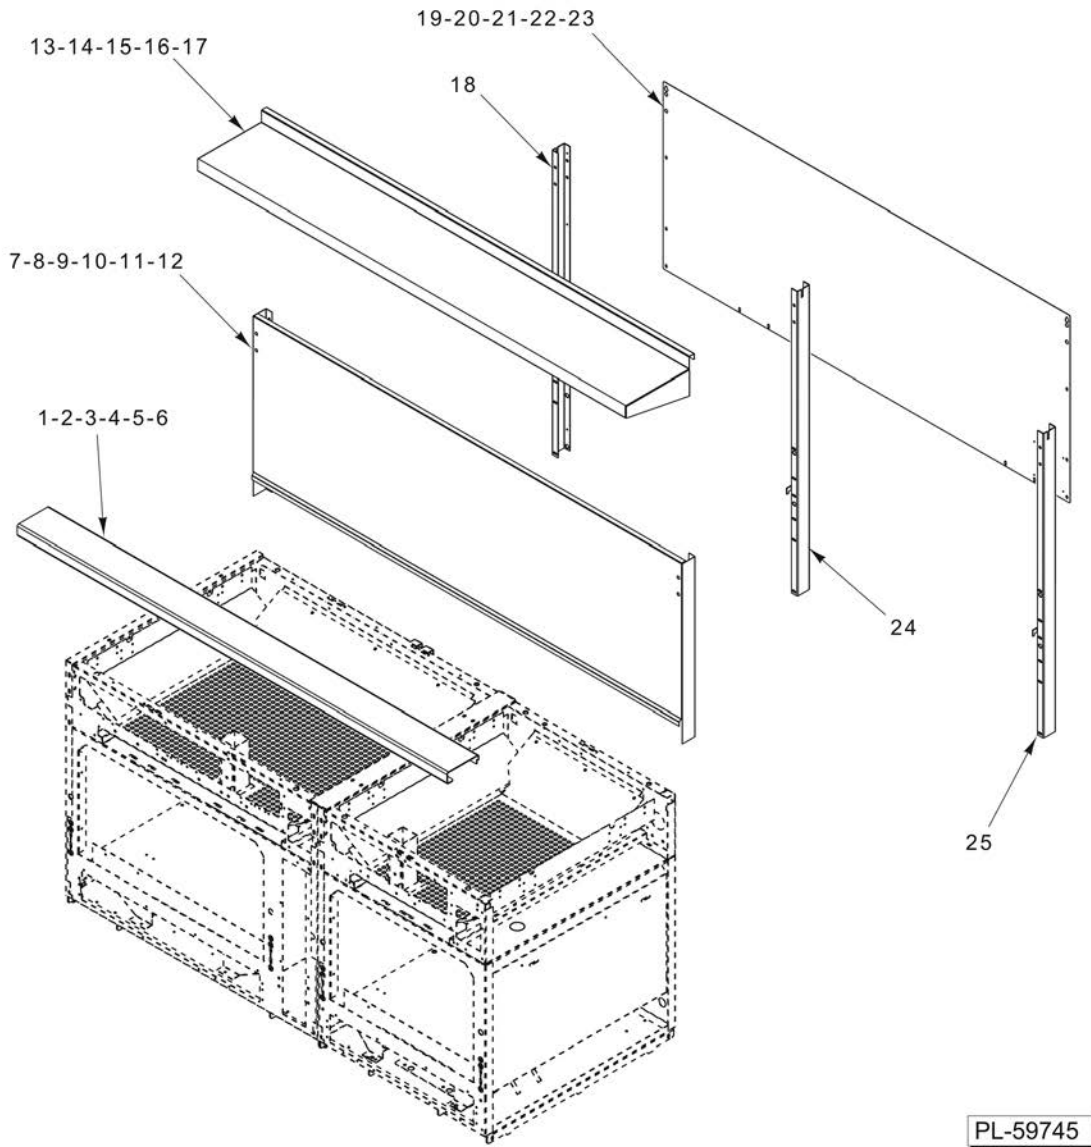

**BACKSPLASH, SHELF, AND BULL NOSE
(ALL SIZES)**

**BACKSPLASH, SHELF, AND BULL NOSE
(ALL SIZES)**

ILLUS. PL-59745	PART NO.	NAME OF PART	AMT.
1	00-921884-00012	Bull Nose (12 In.).....	1
2	00-921884-00024	Bull Nose (24 In.).....	1
3	00-921884-00036	Bull Nose (36 In.).....	1
4	00-921884-00048	Bull Nose (48 In.).....	1
5	00-921884-00060	Bull Nose (60 In.).....	1
6	00-921884-00072	Bull Nose (72 In.).....	1
7	00-921317	Backsplash (12 In.).....	1
8	00-921053-00024	Backsplash (24 In.).....	1
9	00-921053-00036	Backsplash (36 In.).....	1
10	00-921053-00048	Backsplash (48 In.).....	1
11	00-921053-00060	Backsplash (60 In.).....	1
12	00-921053-00072	Backsplash (72 In.).....	1
13	00-921730-00024	Shelf (24 In.).....	1
14	00-921730-00036	Shelf (36 In.).....	1
15	00-921730-00048	Shelf (48 In.).....	1
16	00-921730-00060	Shelf (60 In.).....	1
17	00-921730-00072	Shelf (72 In.).....	1
18	00-921728	Support - Backsplash (LH).....	1
19	00-921713	Panel - Back (12 In.).....	1
20	00-923525	Panel - Back (24 In.).....	1
21	00-921054	Panel - Back (36 In.) (Use two for 72 In. Units).....	1
22	00-923009	Panel - Back (48 In.).....	1
23	00-929007	Panel - Back (60 In.).....	1
24	00-921729	Support - Backsplash (RH) (Used on 60 & 72 In. Units).....	1
25	00-921729	Support - Backsplash (RH).....	1

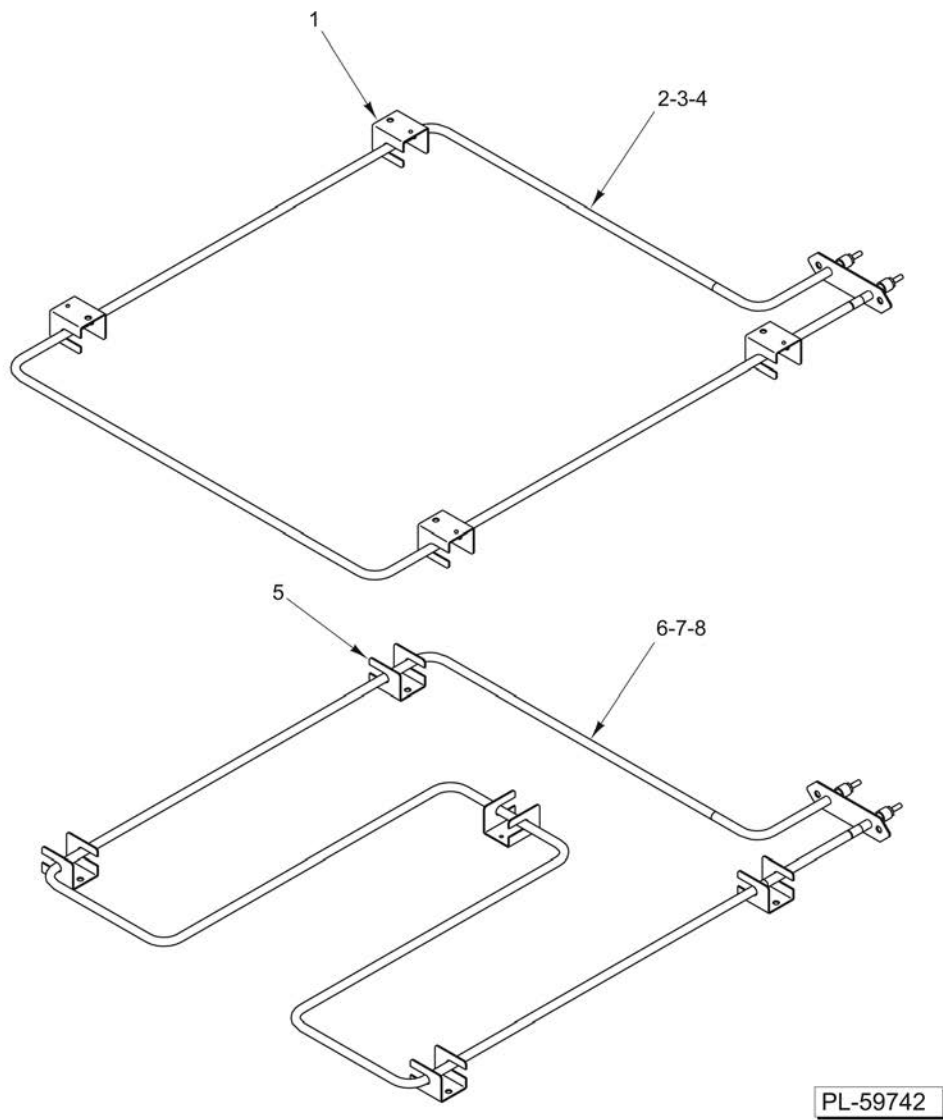

OVEN ELEMENT

OVEN ELEMENT

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-59742			
1	00-412925-00001	Clamp - Element.....	AR
2	00-927538-0004S	Oven Element - Upper (208 V.).....	AR
3	00-927538-0005S	Oven Element - Upper (240 V.).....	AR
4	00-927538-0006S	Oven Element - Upper (480 V.).....	AR
5	00-412925-00001	Clamp - Element.....	AR
6	00-927538-0001S	Oven Element - Lower (208 V.).....	AR
7	00-927538-0002S	Oven Element - Lower (240 V.).....	AR
8	00-927538-0003S	Oven Element - Lower (480 V.).....	AR

